

Screening Room Instructions

Table of Contents	
Turning the System ON	Page 2
Selecting/switching Input	Page 3
Volume Control	Page 4
Turning the System OFF	Page 4
Changing Blu-ray Region	Page 5
Shade Controls	Page 5
Lighting Controls	Page 5
Troubleshooting	Page 6

Turning the System ON

1. Locate the Crestron touch panel below the All-in-one PC. Touch the screen or the buttons to turn the display ON if the panel is not illuminated.



2. Touch the screen or the buttons again to process to the main menu



Main Menu



3. Determine which source (input) you are wanting to use from the menu selection



4. **Press and Hold** the Source (input) that you are wanting to use to turn the system ON.



NOTE: The system will take a short amount of time to turn ON.

Selecting/switching Input

Classroom PC – This option will select the All-in-one PC.

*A wireless keyboard/touchpad is located in the drawer below the Crestron panel.



Blu-ray – This option will select the OPPO Blu-ray player located above the All-in-one PC.

*The remote is located in the drawer below the Crestron panel.



AVR Aux is not active at this time.



Watch TV is not active at this time.



Air Media – Once Air Media is selected enter the IP Address once it comes up on the Sharp TV. *Air Media is not optimal as an Audio/Video source. Please use **Rack HDMI** or **Classroom PC**



Rack HDMI plate – This option will select the HDMI port located on the panel located towards the bottom of the media rack. The Rack HDMI will allow you to plug an external device into the rack and view on the TV



Volume Control & Turning the System OFF

Volume Control

Volume Control – Volume for the media rack should **ONLY** be controlled by the Crestron panel, and **not** by the Marantz A/V receiver located near the bottom of the media rack.



Turning the System OFF

Power Button – To turn the system off touch either of the power buttons located on the Crestron panel.



Next you will need to select the **YES** option to turn the system off.

No picture available

Changing Blu-ray Region & Shade Controls

Changing Blu-ray Region

To set the Blu-ray region to A, B or C, please do the following:


1. Power on the player without any disc inserted. After awhile, the screen will show "NO DISC".
 2. About 2 seconds after the "NO DISC" is displayed, press DIMMER, DIMMER, DIMMER, MUTE and then the region code. 1 for A, 2 for B, 3 for C.
 3. Power off your player. When started up again, the region code has changed.
 4. The region code selection must be done within 20 seconds.
-

Blackout & Sheer Shade Controls

Opening and Closing Shades –

1. Select one of the following - Blackout, Sheer, or Both
2. Select Open or Closed


*Pressing the button while the shades are in-motion will stop them at current height

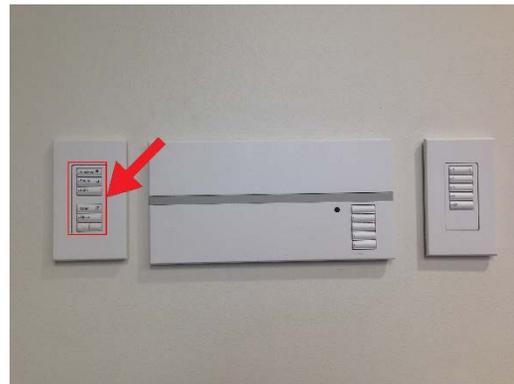

Lighting Controls

Select level of lighting

- 1 = 100%
- 2 = 75%
- 3 = 50%
- 4 = 25%
- OFF = Will turn all lights off

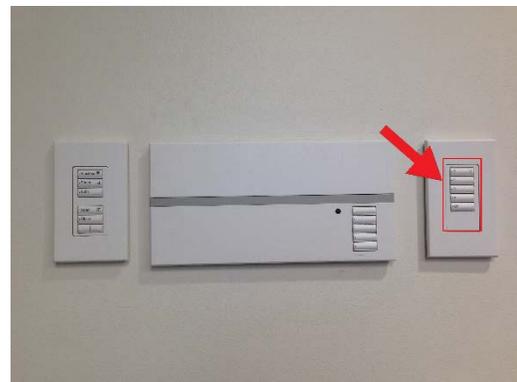

Troubleshooting

For assistance or problems with the system please contact libsystems@tcu.edu or call 817-257-7664

v2